



**LINDURA**  
Engineered  
Hardwood  
Flooring

## CARE AND MAINTENANCE INSTRUCTIONS

Proper care and maintenance will help ensure your floor always looks its best and will lengthen its life.

One of the great advantages of prefinished sealed hardwood flooring is that it is easy to care for. The matte UV finish surface is easy to clean. Light dirt can be brushed away or removed with a dry vacuum cleaner. The vacuum head must be brush or felt. Heavier dirt can be wiped from the floor with a damp cloth using standard hardwood cleaner mixed with water.

The hardwood flooring should never be left damp or wet over a longer period of time. Standing water and »puddles« should be avoided. Spills and tracked-in dirt should be wiped up immediately. Steam cleaners are not suitable for use on this flooring.

Do not use scouring powder or liquid, ammonia-based cleaners, wax-based products, detergents, oil soap (or products similar in nature), as these can damage the surface of the flooring.

A generously-planned clean-run zone in the entrance area protects the floor from rough dirt and becoming dirty quickly.

To protect the flooring from scratches, you should also fit chair and furniture feet with felt sliders. Office chairs, mobile containers etc. on castors must have soft, standard running surfaces. We recommend protecting the floor in these heavy wear areas with appropriate floor protection mats (e.g. polycarbonate mats). Do not roll or slide heavy objects directly upon the floor.

The hardwood flooring requires a continuous room climate with approx. 35–60 % relative humidity and a room temperature of approx. 18–22° C / 64– 74° F. If you measure or anticipate a significantly lower humidity, you must install a humidifier (vaporiser) to prevent the hardwood flooring from drying out excessively.



30-year  
Finish and Wear-through  
Warranty for residential use  
(5 years for commercial use)